

FEG PLUS[®] Module: 5-HFM-887-PVI

Tubular Ultrafiltration One-Inch Modules for Industrial Applications


PRODUCT DESCRIPTION				
KSS Part Number (KPN):	0711667			
Membrane Chemistry:	PVDF			
Membrane Type:	HFM (neutral)			
Membrane Area:	1.1 ft ² (0.10 m ²)			
Molecular Weight Cut-Off:	100,000 Dalton (nominal)			
Housing Construction:	CPVC			
Seal:	CPVC Insert (Epoxied in Place)			
Gasket:	Viton®			
Interconnecting Components:	See second page			

OPERATING AND DESIGN INFORMATION*				
Maximum Inlet Pressure:	90 psi @ 140°F (6.2 bar @ 60°C)			
Minimum Outlet Pressure:	5 psi (0.3 bar)			
Maximum Operating Temperature (at pH 8.0):	140°F (60°C)			
Maximum Permeate Side Back Pressure:	5 psi (0.3 bar)			
Maximum Feed Side Pressure Drop:	5 psi @ 140°F (0.3 bar @ 60°C)			
Allowable pH - Continuous Exposure:	2.0 - 10.0 @ 140°F (60°C)			
Allowable pH - Short Term Exposure:	1.5 - 10.5 @ 140°F (60°C)			

*Consult KSS Process Technology Group for specific applications.

FEED FLOW VS. PRESSURE DROP**							
Circulat	Circulation Flow		Crossflow Velocity		Pressure Drop		
gpm	m³/hr	fps	m/s	psi	bar		
19	4.3	7.8	2.4	1.0	0.07		
30	6.8	12.3	3.7	2.2	0.15		
38	8.6	15.5	4.7	3.0	0.21		

**Data based on Water at 77° F (25°C) and specific gravity of 1.0. Circulation rates exhibit variances of 15%.

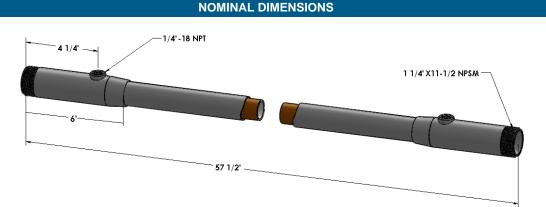

OPERATING GUIDELINES

Ancillary Parts

KSS recommends that these membranes be used with KSS supplied ancillary parts. Sealing is provided by gaskets. No additional sealing compound or tape is recommended for use on threaded connections.

Membrane Incompatibility

Prior to exposing the membrane to any chemical, the chemical should be reviewed by Koch Separation Solutions. Aside from the listed chemicals below, synthetic coolants, semi-synthetic coolants, kerosenes, naphtha, gasoline, floc polymers may affect membrane performance.

Chemicals that should be avoided include the following:

- Aprotic Solvent (e.g., Dimethyl Formamide, Dimethyl Acetamide, N-Methyl Pyrolidine, etc.)
- Chlorinated Solvents (e.g., Methylene Chloride, Chloroform, Carbon Tetrachloride, etc.)
- Ketones (e.g., Acetone, Diacetone Alcohol, etc.)
- Silicones or Silicone based Defoamers (e.g., Siloxane)

FEG PLUS MODULE

0	6	∂	
	Item	Description	KPN
	1	Terminator Kit	0230020
		Includes:	
0		Holding Nut, PVC (x2	
20-		Nipple, PVC (x2)	
K		Snap Ring, SS304 (x2)	
	2	U-Bend Assembly, CPVC	0020392
(10)	3	Holding Nut (PVC)	0020281
	4	Snap Ring, SS304	0020310
	5	Membrane Washer, Viton®	0020375
	6	Permeate Straight Connector	0211800
	7	Permeate Pass Kit (for 4 tubes)	0211786
		Includes:	
		Adapter ¼ to ¾ (x1)	
		Permeate Tee Connector (x4)	
		Permeate Elbow Connector (x4)	
		PE Tubing	
	8	Permeate Tee Connector	0211803
	9	Permeate Elbow Connector	0211804
	10	Interconnector Kit, CPVC	0230091
		Includes:	
		CPVC interconnector (x1)	
		PVC Nut Holding (x2)	
		Snap-Ring (x2)	

The information contained in this publication is believed to be accurate and reliable, but is not to be construed as implying any warranty or guarantee of performance. We assume no responsibility, obligation or liability for results obtained or damages incurred through the application of the information contained herein. Refer to Standard Terms and Conditions of Sale and Performance Warranty documentation for additional information

Koch Separation Solutions, Inc. 850 Main Street, Wilmington, MA 01887

Main: +1-978-694-7000 • Fax: +1-978-657-5208 • Toll Free: +1-888-677-5624

For complete contact information and listing of our global locations, visit www.kochseparation.com ©2021 Koch Separation Solutions, Inc. All rights reserved worldwide. For related trademark information, visit www.kochseparation.com/legal.